

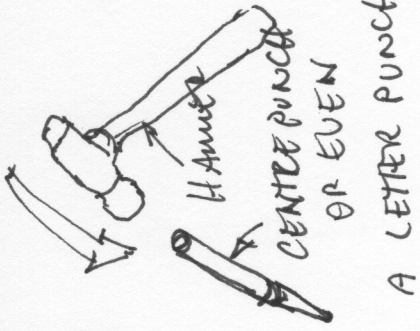


MIX IT UP.

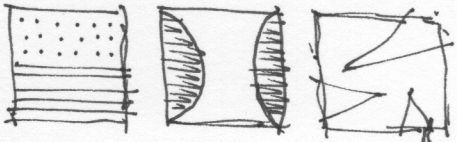

Hammer
CENTER PUNCH
OR EVEN
A LETTER PUNCH.

COASTER

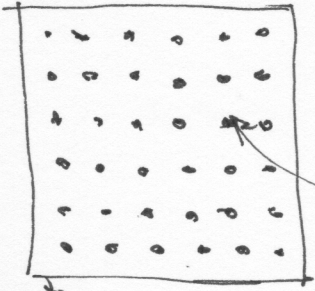


CENTER PATTERN

SANDING BLOCK
WET & DRY.



WET & DRY
IN ONE
DIRECTION
FOR 'BRUSHED'
EFFECT.

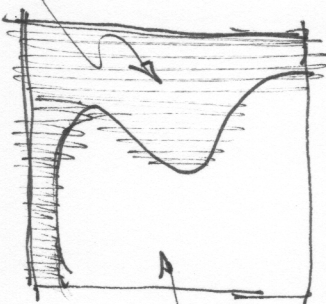

POLISHED
WITH
BRASSO




RAH





- STEP 1. WET & DRY WHOLE SURFACE
- STEP 2. COVER IN CONTACT ADHESIVE
- STEP 3. CUT SHAPE AND PEEL OFF PART
- STEP 4. BRASSO POLISH ON EXPOSED SURFACE
- STEP 5. REMOVE ALL CONTACT-FILM.

OTHER SHAPES:

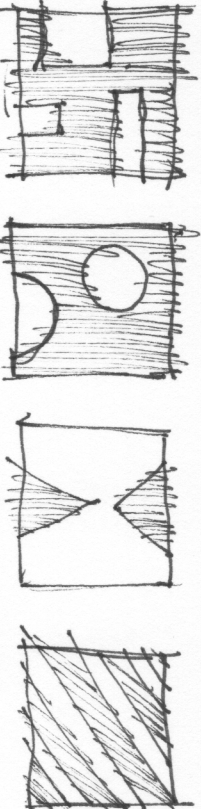


+ LOTS MORE

USE A SCRAPER
& STEEL RULE
TO SCRATCH
THE SURFACE

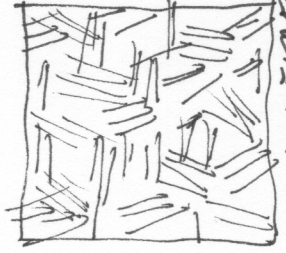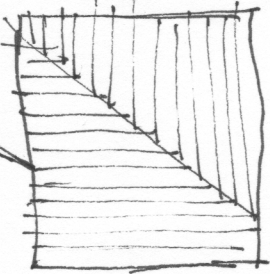

DO DIFFERENT
DIRECTIONS

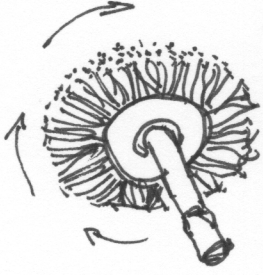

USE WIRE BRUSH
IN DRILL FOR
A BURNISHED
EFFECT.

IDEAS: